

## Building the EVSE

In order to build a complete EVSE (charging station) you will also need:

- 2/4 pole contactor with 230V AC coil, rated for the max charging current.
- Fixed charging cable or socket with locking actuator.
- Enclosure with DIN rail. (EPN2205 or Famatel type 3958)
- optional Residual Current Monitor to protect against DC residual currents

- Terminal blocks (Wago TOPJOB S)

When using a **fixed** charging cable, please check if there is a resistor between PP and PE in the Charging Plug. Otherwise the EV will not start charging.

220 Ohm = 32A Cable

680 Ohm = 16A Cable

This resistor determines the max charge current the cable can handle, and is already fitted on all factory made cables.

Do not connect the PP wire to the SmartEVSE, if using a fixed cable!


The contactor should be connected to terminals N and C1.

The C2 output is for future use, and will drive a second contactor.


Please note that energy efficient (AC/DC) contactors will **not** work correctly!

! The EVSE needs to be protected with a circuit breaker and residual-current circuit breaker, usually located near or in the distribution board.

## Diagram

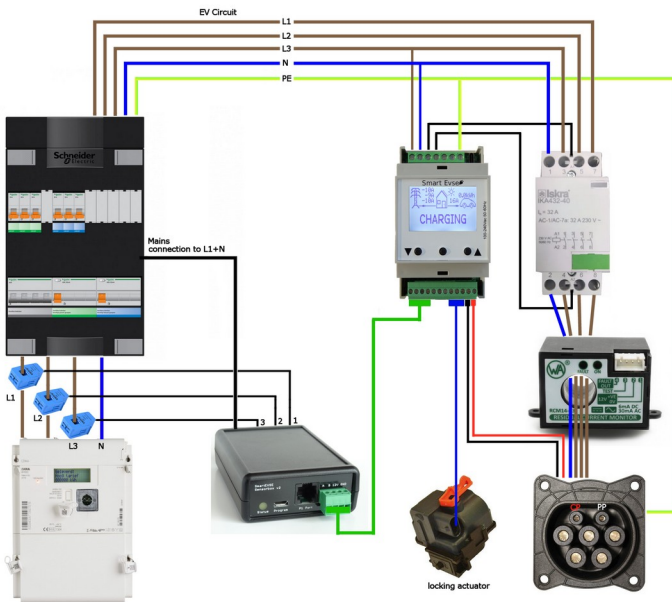

## Low voltage connections

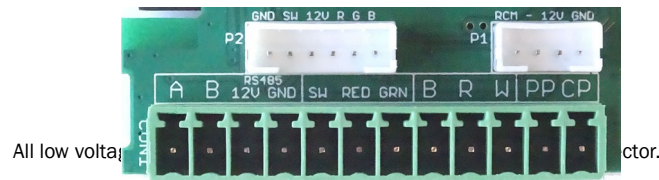

**A, B, 12V** and **GND** connections are used to connect the sensorbox. (optional) **A, B** and **GND** should be connected to each module if you choose to use load balancing between SmartEVSE modules.

A 12v LED can be connected between the **12V(+)** and the **RED(-)** and **GRN(-)** terminals. You can also connect a ready made cable to connector **P2**.

An (optional) switch can be connected to the **SW** terminal and **GND**. It can be used to start/stop charging and toggle between charge modes.

The (optional) RCM14-03 residual current sensor should be connected to connector **P1**.

**B, R, W** (lock) need to be connected to the locking solenoid or 12V motor that will lock the charging cable in it's socket. (see next page)

**PP** (proximity pilot) signal will determine what max current the charging cable can handle, and needs to be connected to the charging socket. In case of a fixed cable, this signal is not used.

**CP** (control pilot) signal communicates with the EV, and will also inform the EV the maximum allowed charging current. This signal needs to be connected to the CP pin of the charging socket, or connected to the CP wire if using a fixed cable. The maximum total length of the CP wire+ charging cable is 15meter.

## Sensorbox (optional)

The SmartEVSE is capable of dynamically adjusting the chargecurrent, depending on other loads that use the same mains connection. We call this smart mode, and it will require the following extra items:

- 'Sensorbox plus' with Current Transformers, one for each phase or 'Sensorbox 2' and a compatible smart meter with P1 port.
- 4+ wire cable for the connection between SmartEVSE and Sensorbox.

The Sensorbox should be placed where the mains connection enters the building. Usually this is just after the kWh meter, this allows it to measure the total current for each phase and send this information to the SmartEVSE. Clip the current transformers on the L1,L2 and L3 wires, and plug the other end of each cable into the Sensorbox.

For the Sensorbox2, plug the RJ12 cable into the smart meter and Sensorbox2

The data cable coming from the Sensorbox should be connected to terminals

**A, B, +12V** and **- GND** of the SmartEVSE.

This data cable can be more then 100 meters if needed.

## The Locking Actuator

A locking actuator can be used to lock the charging plug into the socket. It will lock the cable when charging starts, and will unlock the cable after charging has stopped.

The SmartEVSE supports at least six types of locking actuators:

The **DSIEC-EL -ELB** and **-ELM** locks have three wires and can be connected directly to the **B**(lue) **R**(ed) **W**(hite) terminals on the module.

Sometimes it locks, while it should unlock, you will then have to swan the Red and White wires.

Set the Lock option in the menu to SOLENOID

The **DUOSIDA DSIEC-EL** lock has 4 wires, connect the

**B**: Blue **R**: Yellow+White **W**: Red

Set the Lock option in the menu to MOTOR

The **DSIEC-ELC** lock will not work with the SmartEVSE :

The **Ratio lock** has 3 wires, connect them as follows:

**B**: Blue **R**: Black **W**: Red

Set the Lock option in the menu to SOLENOID

**The Phoenix contact locking motor** has 4 wires and needs to be connected as follows:

**B**: BL/YL **R**: BL/GR + BL/BR **W**: BL/RD

Set the Lock option in the menu to MOTOR

When using a fixed charging cable, this function is not visible in the menu.

