


# EVlink Home Anti-tripping Module for three phase installation EVA1HPC3


**en** User manual

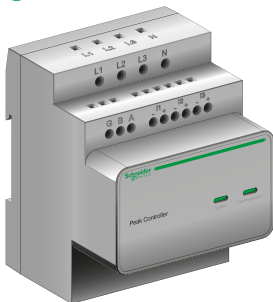

JYT4921902-00\_EN

**Schneider**  
Electric

**i**

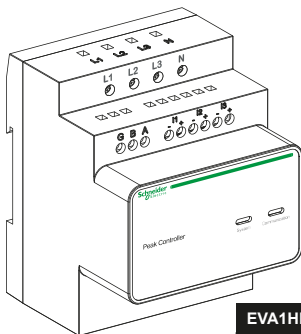

**EVA1HPC3**

**Customer Care Center**



The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, non-commercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2022 Schneider Electric. All rights reserved.

## ⚠ DANGER

**DANGER** indicates a hazardous situation which, if not avoided, **will result** in death or serious injury.

## ⚠ WARNING

**WARNING** indicates a hazardous situation which, if not avoided, **could result** in death or serious injury.


## ⚠ CAUTION

**CAUTION** indicates a hazardous situation which, if not avoided, **could result** in minor or moderate injury.

## NOTICE

**NOTICE** is used to address practices not related to physical injury.

# 1 Contents

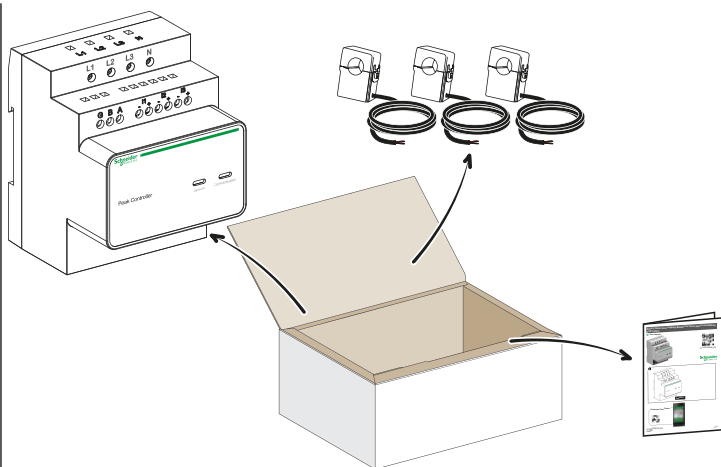

## 2 Description

### 2.1 Specified use

#### WARNING

##### **The following points should be followed**

This Anti-tripping module is designed for use with the EVlink Home charging station. Do not use with other electrical devices.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

- The Anti-Tripping Module limits the maximum power draw of the EVlink Home charging station to ensure the continuity of the electrical distribution under all conditions.
- The Anti-Tripping Module senses the total current drawn by the local installation and, depending on the Maximum Current threshold set by the user, reduces the current drawn by the EVlink Home charging station.
- When installing and connecting the Anti-tripping module, ensure that you comply with the requirements of various countries.

### 2.2 About this manual

- This instruction sheet applies to the three-phase Anti-Tripping Module for the three-phase EVlink Home charging station only.
- This instruction sheet is written for electricians and customers.

### 2.3 Dimension and weight

#### **Anti-tripping module**


Dimension (W/H/D)	72 x 89 x 75 mm
Compatibility	4 modules wide
Weight	180 g
Mounting type	DIN rail

#### **Current sensor**

Dimension (W/H/D)	48 x 30 x 32 mm
Sensor cable	50 cm long with 1.2 mm <sup>2</sup> diameter wires

## 2 Description

### 2.4 Description

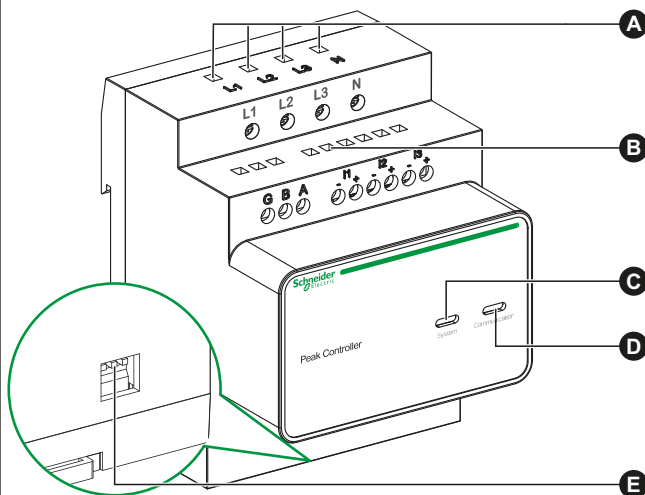

<b>A</b>	Power supply terminals	L1 connects to the first phase, L2 connects to the second phase, L3 connects to the third phase and N connects to the Neutral cable.
<b>B</b>	Current sensor terminals	I1-, I1+, I2-, I2+, I3- and I3+ connect to the black and red wires of each current sensor.
<b>C</b>	System status indicator	Green: Module is correctly monitoring & controlling the EV charger's power. Red: Fault. Module is unable to communicate with the EV charger. Refer to section 7 (Troubleshoot).
<b>D</b>	Communication mode indicator	Green constant: Communicating with EV charger via PLC (Power Line Communication). Off: Refer to section 7 (Troubleshoot)
<b>E</b>	Maximum current limiter	Limits the maximum current for the EVlink Home charging station by setting the position of 3 DIP switches.

## 3 Characteristics

### 3.1 General data

- **Electrical Characteristics**
  - Supply voltage: 220-240 V AC (+/- 10%)
  - Frequency: 50/60 Hz (+/- 10%)
  - Rated power: 5 W
  - Sampling current: 1 to 100 A
  - Polling interval is 1000 ms
  - Communication protocol: PLC (Power Line Communication)
- **Environmental Conditions**
  - Indoor use
  - Altitude: 0 - 2000 m
  - Relative humidity: 5% to 95%
  - Nominal Temperature: -30 to +50 °C
  - Overvoltage category: III
  - Pollution degree: 2
  - Insulation degree: Reinforced Insulation
- **Standards**
  - EN 61010-1: 2010, EN 61326-1: 2013

### 3.2 Storage

- Ensure that Anti-tripping module and its accessories are stored indoors in a dry and ventilated conditions where the:
  - temperature does not exceed -40 °C to +85 °C
  - monthly relative humidity does not exceed 90%
  - atmosphere is free of corrosive and explosive gases

### 3.3 Operation

- The Anti-Tripping Module's housing should be kept sealed to prevent water ingress.
- Failure to comply with the instructions contained within this manual may result in potential safety hazards and/or the failure of safety devices.
- While this manual provides certain guidelines, users should also comply with local safety regulations and accident prevention provisions.
- Due to technical or legal restrictions, it is not possible to supply all accessories to all countries and regions.

### 3.4 Environment

- Compliant with RoHS (EU directive 2002/95/EC).
- Compliant with REACH (EU regulation 1907/2006).


### WARNING

#### **FOLLOW THESE GUIDELINES WHEN WIRING EQUIPEMENT**

- Connect the Anti-Tripping Module to the Distribution Board using wires with a diameter equal to or greater than 1.5 mm<sup>2</sup> but **no longer than 30 metres**.
- Connect the Anti-tripping module to the Distribution Board via the screw terminals N and L1, L2, L3, where L1, L2, L3 are for the 3 Live wires and N is for the Neutral wire (see diagram below).
- Connect the Anti-tripping module to the Current sensor using wires with a diameter equal to or greater than 1.0 mm<sup>2</sup> but **no longer than 10 metres**.


**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## 4 Wiring

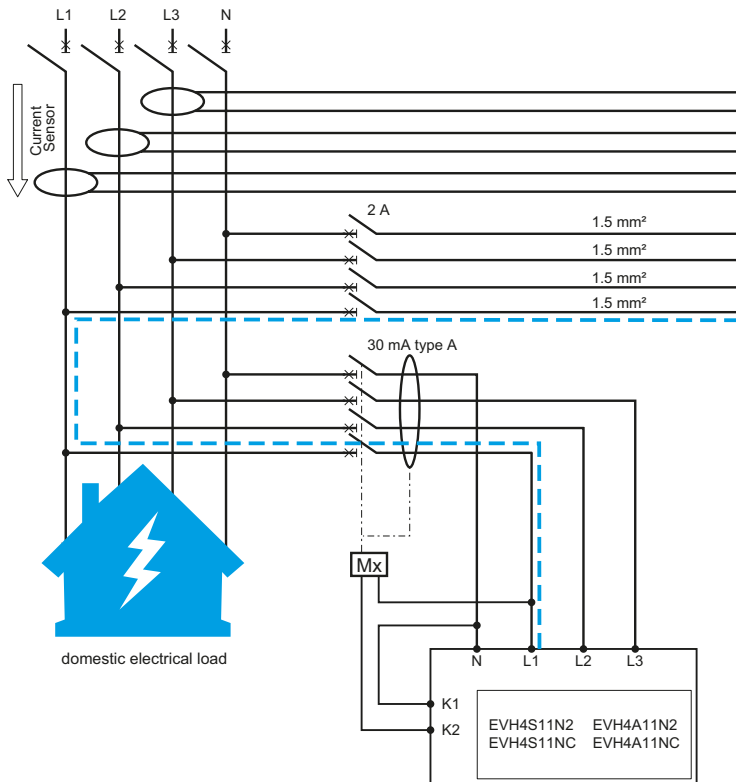


--- Power Line Communication (PLC)  
 carries data between the Anti-tripping module  
 and EVLink Home charging station in L1 wire





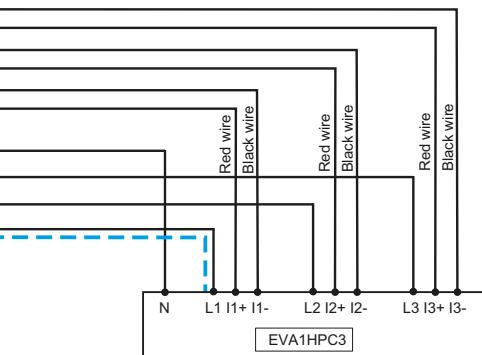

### EVlink Home 3P

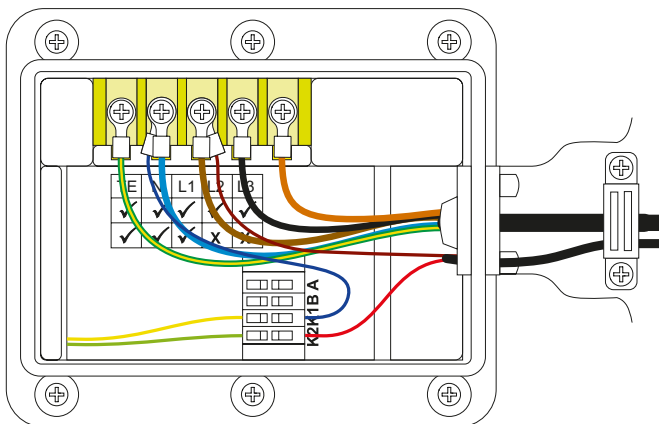

# 5 Configure

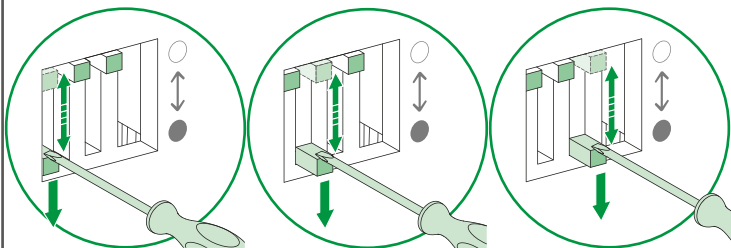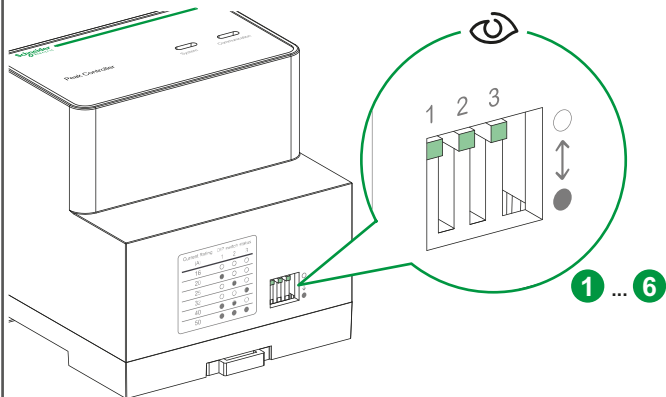

			Current Rating (A)	DIP switch status		
1	2	3		1	2	3
			16			
			20			
			25			
			32			
			40			
			50			

## 5 Configure

<b><i>NOTICE</i></b>
----------------------

Set the Maximum Current value (16/20/25/32/40/50 A) just beneath or equal to the Current Rating of the home's electrical installation by changing the position of the DIP switches
--

<b><i>NOTICE</i></b>
----------------------

Restore the electrical power.
-------------------------------

## 6 Installation


### 6.1 Installation Anti-tripping module

#### **⚠ ⚠ DANGER**

##### **HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Turn off the electrical power supply before starting work.
- Use a Voltage Tester of appropriate rating.
- Before mounting on the module on a DIN rail, pull the tab at the module's rear to unlock the clip.
- After mounting the module on a DIN rail, push the tab at the module's rear to lock the clip.

**Failure to follow these instructions will result in death or serious injury.**

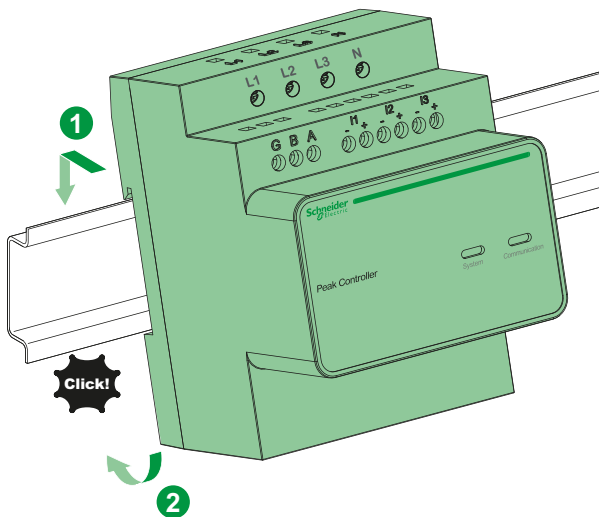

## 6 Installation


### 6.2 Wiring Anti-tripping module

#### ⚠ WARNING

The following points should be followed

Check the phase order of the wiring.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

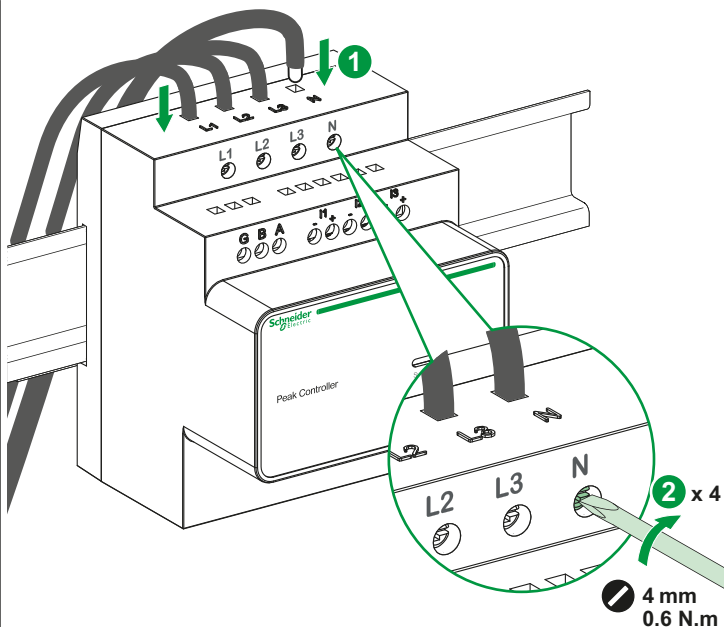

Wire	Distribution board - EVlink Home charger	EVlink Home charger - Shunt Trip (Mx)	Distribution board - Anti-Tripping Module	Anti-Tripping Module - Current Sensor
Diameter	5x 6 mm <sup>2</sup>	2x 1.5 mm <sup>2</sup>	4x 1.5 mm <sup>2</sup>	6x 1 mm <sup>2</sup>
Length	< 50 m	< 30 m	< 30 m	< 10 m

## 6 Installation

### ⚠ ⚠ DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Do not connect or disconnect the current sensor whilst the electrical circuit is powered.
- So, turn off the electrical power supply before connecting or disconnect the current sensor.
- The current sensor can be installed in both directions in an AC installation.
- Do not leave any wires unconnected.

**Failure to follow these instructions will result in death or serious injury.**


### 6.3 Installation current sensor

#### ⚠ WARNING

**The following points should be followed**

Disconnect power supply before connecting or disconnecting current sensor.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

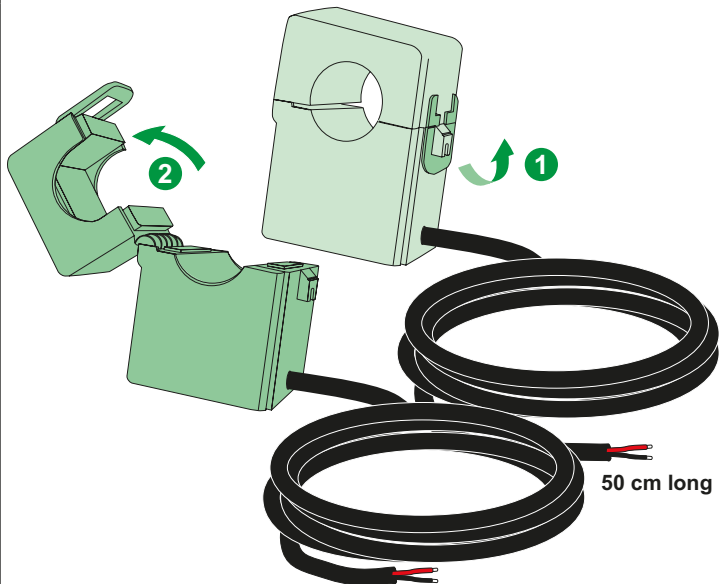

## 6 Installation


### 6.3 Installation current sensor

#### ⚠ WARNING

The following points should be followed

Check the phase order of the wiring.

Failure to follow these instructions can result in death, serious injury, or equipment damage

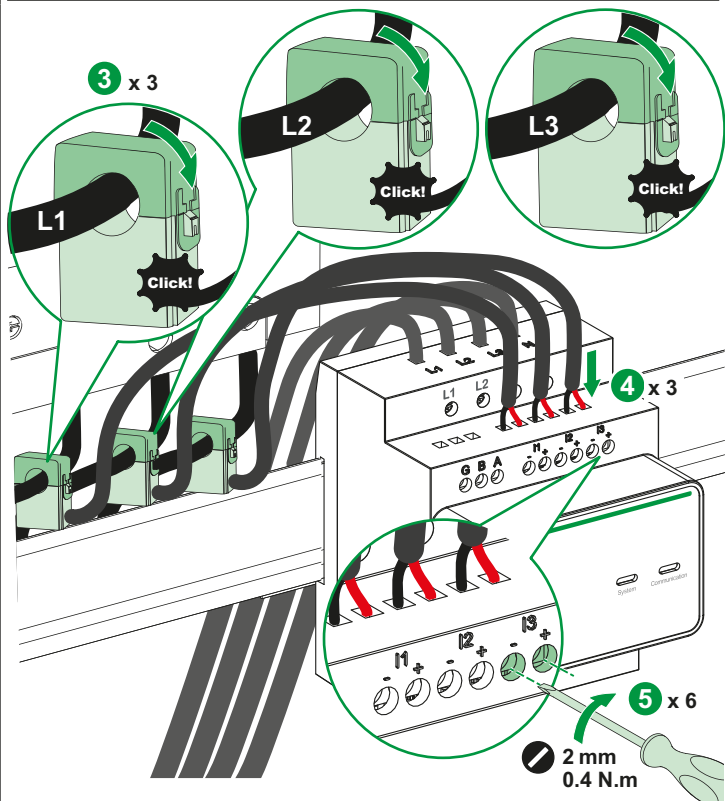

## 7 Troubleshoot

System's status indicator	Possible causes and corrective measure
Red	The current draw exceeded the Maximum Current threshold defined by the user on the module. Check if the Maximum Current threshold can be increased to just beneath or equal to the Current Rating of the home's electrical installation (see section 5).
	The module has detected that voltage supply is under or over the designed limit. Verify that the installation's electrical distribution is within 187-253 V AC.
	The DIP switch position is not correct, set the right current rating (see section 5).
	L2/L3 wire are not connected. Check if the Anti-tripping module is correctly connected as per electrical diagram (see section 4).
Communication's status indicator	Possible causes and corrective measure
Off	No communication between Anti-tripping module and EVlink Home charging station, check if Anti-tripping module and EVlink Home charging station are correctly connected as per electrical diagram (see section 4).

## 8 Recycle



The packaging materials from this equipment can be recycled.  
The product and all accessories marked with this symbol are electrical and electronic components that must be disposed of separately from household waste. Please help protect the environment by disposing waste in appropriate containers.  
Thank you for helping to protect the environment.

## 9 Warranty

<b>Contractual warranty</b>	18 months
-----------------------------	-----------

### Manufacturer

Schneider Electric Industries SAS  
35, rue Joseph Monier  
CS 30323  
F - 92506 Rueil Malmaison Cedex  
France  
[www.se.com](http://www.se.com)

### UK Importer

Schneider Electric Limited  
Stafford Park 5  
Telford, TF3 3BL

United Kingdom

**UK  
CA**